
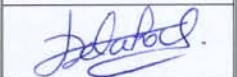


PARACHUTES DE FRANCE 2 rue Denis Papin Jouy le Moutier 95031 Cergy Pontoise Tél. 33 1 34 32 77 77 Fax 33 1 34 32 73 17	<h2>Service Bulletin</h2> <p>Title : Evolution of the TECHNO 240-B</p>	IGQ_MNG_MQL_004_ENR01 Version 1 du 17/01/06 BSV_06_001 Date: 08/06/06 Page 1/4
--	--	--

Block 1	<u>Technical Background</u>	
a)	Applicability	: All TECHNO 240-B. Part Number : R01-240-B.
b)	Reason	: During dummy tests, a slow deployment of a TECHNO 240-B has been detected.
c)	Description	: Slider and main steering lines replacement, packing modification
d)	Compliance	: Mandatory before any use of a TECHNO 240-B.
e)	Approval	: The technical data have been approved by Parachutes de France in accordance with § 21A.611 of the regulation Part 21.
<p>The implementation of this Service Bulletin is made compulsory by the Airworthiness Directive No 2006-0160-E from EASA</p>		
f)	Labour	: Qualified riggers or packers.
g)	Weight and balance	: Non applicable
h)	Reference document	: FEE (Equipment Evolution Leaflet) # 224
i)	Publication concerned	: owner's manual for TECHNO240 Ed. 01, Juil. 2003 P/N/P9009111410 cancelled, owner's manual for TECHNO reserve canopy Ed 05, Nov 2000 P/N: P9009111400 to be used
j)	Interchangeability	: Non applicable


Block 2	<u>Information about equipment</u>	
a)	Material	: KIT TECHNO 240-C (P/N:P2009052910) including - P/N: P2008036202: Slider 57x74x10 - P/N: P2009030801: Steering lines set Techno 240-C - P/N: P9009111400: owner's manual for all Techno reserve canopies (paper or numeric support)
b)	Supplier	: Parachutes de France, 2 rue Denis Papin Jouy le Moutier, 95031 Cergy Pontoise Cedex France web site : www.parachutes-de-France.com e-mail : infopdf@zodiac.com tel : +33 (0)1 34 32 77 77 Fax : +33 (0)1 34 32 73 17

Block 3	<u>Accomplishment instructions :</u>	
According to instruction and drawings (page 2 to 4)		

Block 4	Diffusion	EASA – DGAC – GSAC – FFP PF – ARZ – Distributeurs – Utilisateurs	Block 5	Quality&Technical Departments Approvals		
			Date	Name	Visa	
			08/06/2006	CHAVANON P.		
			08/06/2006	DELAHOUCHE B.		

STEP A - STEERING LINES REPLACEMENT:

1) and 2) Cut the steering line of canopy at the specified point to remove main steering line from secondary

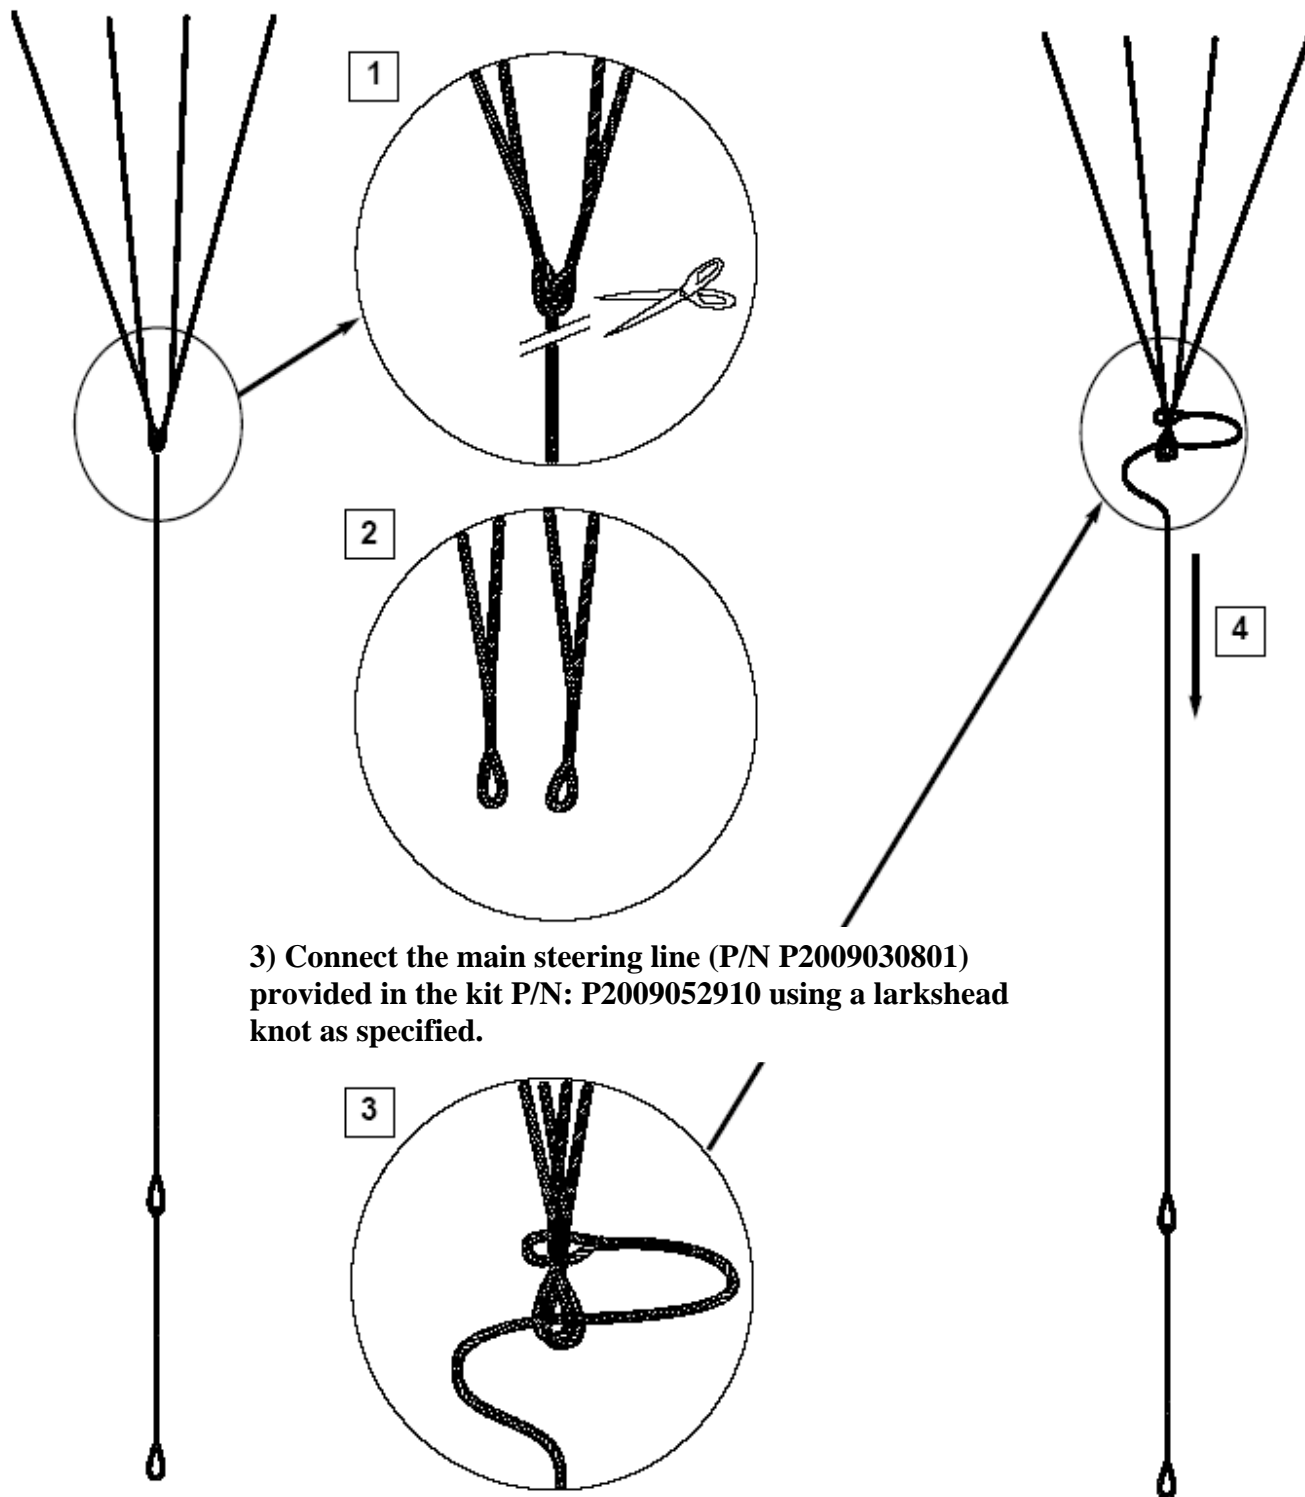

3) Connect the main steering line (P/N P2009030801) provided in the kit P/N: P2009052910 using a larkshead knot as specified.

4) Hold the larkshead knot tight.
Carry out same operations to the opposite steering line.


STEP B - SLIDER REPLACEMENT:

- 1) Remove the original slider of canopy.
(P/N:P2008036600, identification stamp 57-74 CR)


Install the slider provided in retrofit kit
(P/N:P2008036202: identification stamps 57x74x10)

Before installation, the canopy must be inspected and checked.
Installation and packing implies that the canopy, its components and accessories are in perfect condition and airworthy.


- 2) Connect the canopy to the rig.
- 3) Check the canopy connection to risers with the following drawing:

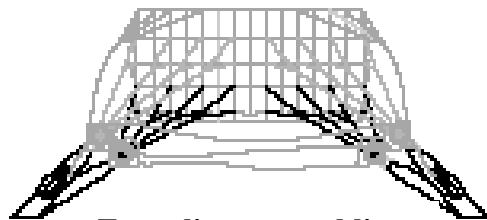


Front lines assembling

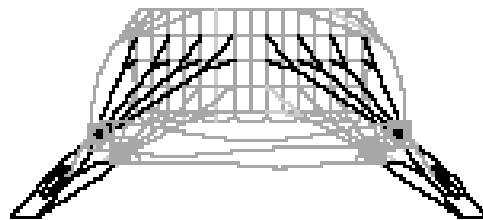

Rear lines assembling

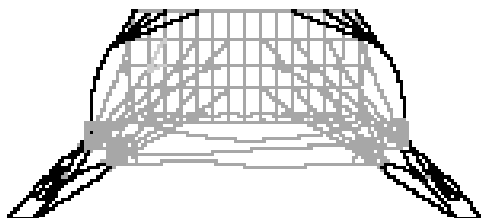

Steering lines assembling

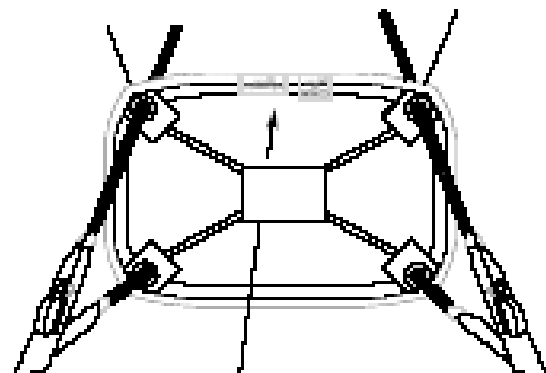

Check of slider position
The identification stamp shall be placed
between rear risers toward top direction.
(lower surface side)

